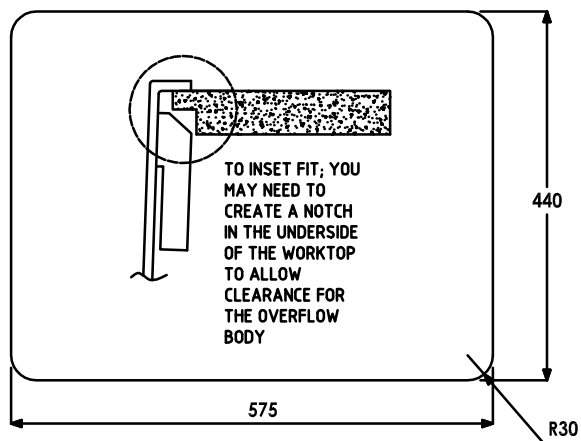INSET CUT OUT

UNDERMOUNT CUT OUT

TO INSET FIT; YOU
MAY NEED TO
CREATE A NOTCH
IN THE UNDERSIDE
OF THE WORKTOP
TO ALLOW
CLEARANCE FOR
THE OVERFLOW
BODY

Important, to the fabricator / installer:
The cut out size indicated is flush with the bowl edge
with a minimum radius where appropriate.
You should confirm with your client if the
worksurface cutout is to be cut flush, inside or
outside this suggested perimeter size.
If you create the cutout smaller or larger than the
indicated size then some accessories may not fit
correctly.
All details are provided in good faith and within the
tolerances of the manufacturing process.
We recommend that a test cutout is made in scrap
timber and checked against the actual sink supplied
before committing to cutting the worksurface.
Abode can not accept liability for problems or costs
incurred by failure to follow this advice.
AW1833 v1 (c) abode 2019